



Instructions

SPARE TIRE PLATFORM PACKOUT ADAPTER

Thank you for purchasing the M.A.S.S. Spare Tire Platform Packout Adapter from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

**** Please read these instructions thoroughly before starting this project ****

**** This is a very simple installation however, you MUST have our STP Accessory Bracket Installed before attempting to install the packout adapter! ****

Tools Required:

There is more than one tool for every job, but below is the list of tools we use for this installation.

- 4mm Allen Socket or Wrench

What's Included:

Spare Tire Platform Packout Adapter Parts:

Packout Plate	1
---------------	---


Spare Tire Platform Packout Adapter Hardware:

M6x35mm Flat Head Bolts	4
M6 Nylon Insert Nuts	4
3/4" x 1/2" OD Spacer	4


Part Overview and Prep

Part Overview and Prep First lets review images of all the necessary parts and hardware to ensure we have everything we need for the installation process

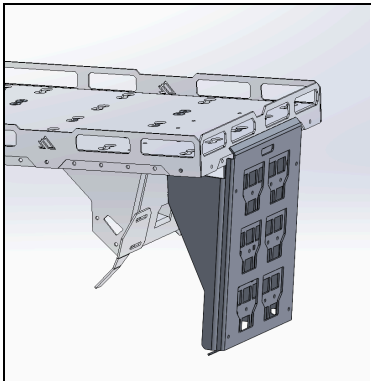

STP Packout Parts:

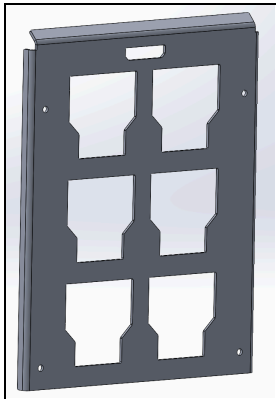

Packout Plate (1):




Spare Tire Platform Packout Adapter Hardware:

M6x35mm Flat Head Bolts	4	3/4" x 1/2" OD Spacer	4
			
M6 Nylon Insert Nuts	4		
			


Ensure that Your STP Accessory Bracket is installed and secure

The first step in this installation is to ensure that the side bracket on which the packout adapter attaches to is installed and secure. Refer to the instructions for the “STP Accessory Bracket” if you believe your bracket is not fastened properly.


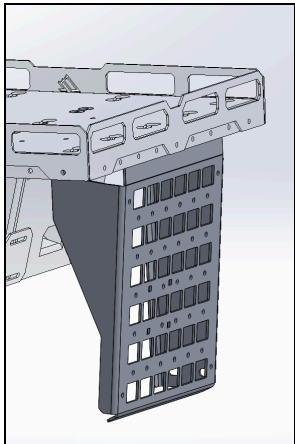


Step 1 - Align the hardware and Install

This is a very simple, one step assembly. Locate the four highlighted positions shown below on the STP accessory bracket.

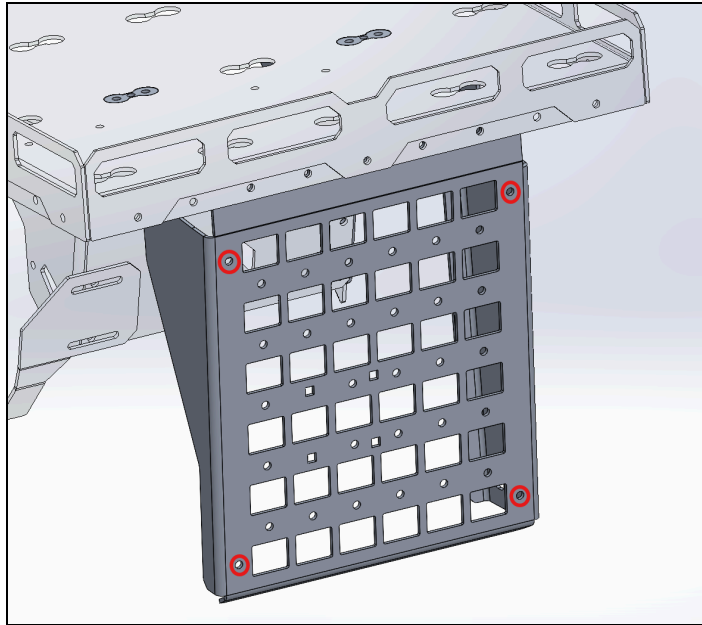

Starting with one of the two upper corners, place a spacer over one of the holes and stack the corresponding hole of the packout plate on top of it, concentrically. Once they are aligned, fasten through the face of the packout plate using (1) M6x35mm Flat Head Bolt and (1) M6 Lock Nut per corner. Tighten just enough to hold the plate up in that corner. Then do the other upper corner and repeat for the bottom two.

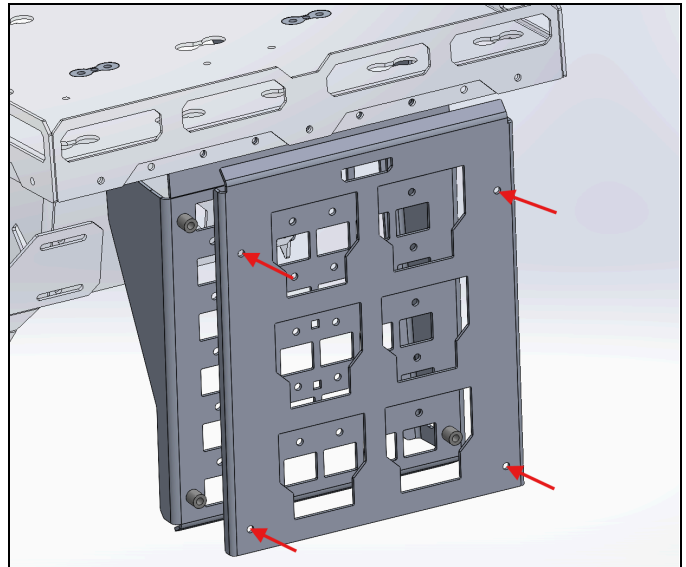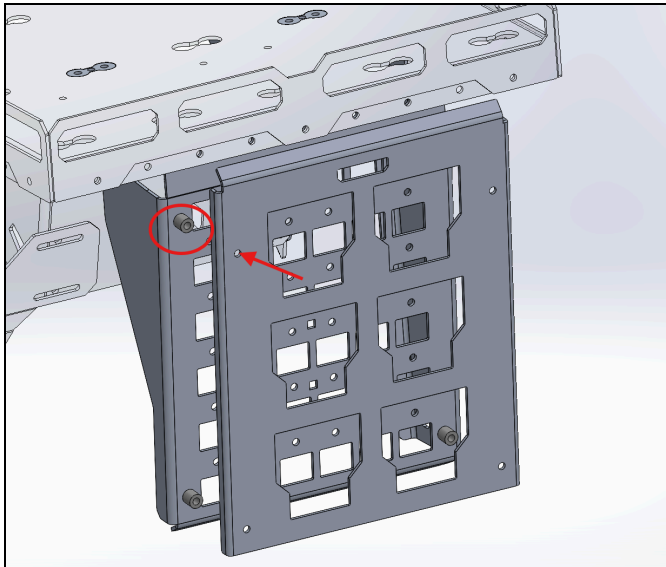

Step 9: Share Your Photos

We take great pride in building our products and we hope that pride extends to you after installing your Spare Tire Platform Packout Adapter. If you are able to share your photos online (Facebook and Instagram), please tag **@AmericanAdventureLab** in the photo. We would love to see how it turned out and give you some reciprocal attention in return.

Congrats! You're all done!

Thank you!

At American Adventure Lab, we strive to improve anywhere we can. If you experience any issues with this product or have any suggestions, please let us know.

If you have any questions or concerns, please don't hesitate to reach out to us at 385.202.4188 or via email at Support@erp.Adventurelab.com.

