



Instructions

MILWAKIE PACKOUT LABEL

Thank you for purchasing your Packout Label from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

****Please read instructions carefully****

Tools Required:

- 3mm Allen Socket/Wrench
- 2.5mm Allen Socket/Wrench

What's included:

Label Base (1):



First Aid Plate Label (1):



Packout Lock (2):



Hardware

M5x10mm Button Head Bolts 4




M4x4mm Button Head Bolts 4




Step 1 - Install the Label into the Base

The first step is to attach the First Aid label into the base plate. To do so use (4) M4x4mm Button Head bolts and fasten together through the front of the label and plate as shown below.

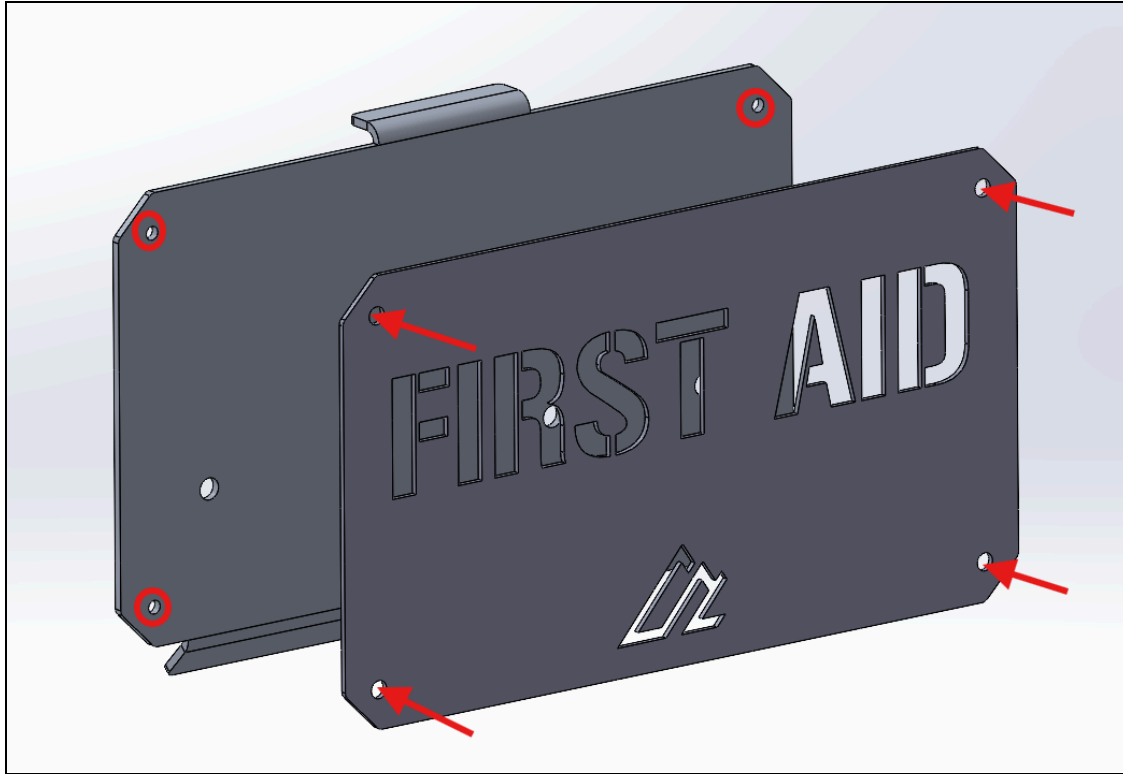

Step 2 - Install the Label Base

The next and final step is to slide the packout locks into the top two slots of the lid. Once in place. Set the base bracket on top of the lid and align the four holes in the base with the four holes of the lock plates. Ensure that the top and bottom flanges insert into the upper slot and lower cavity.

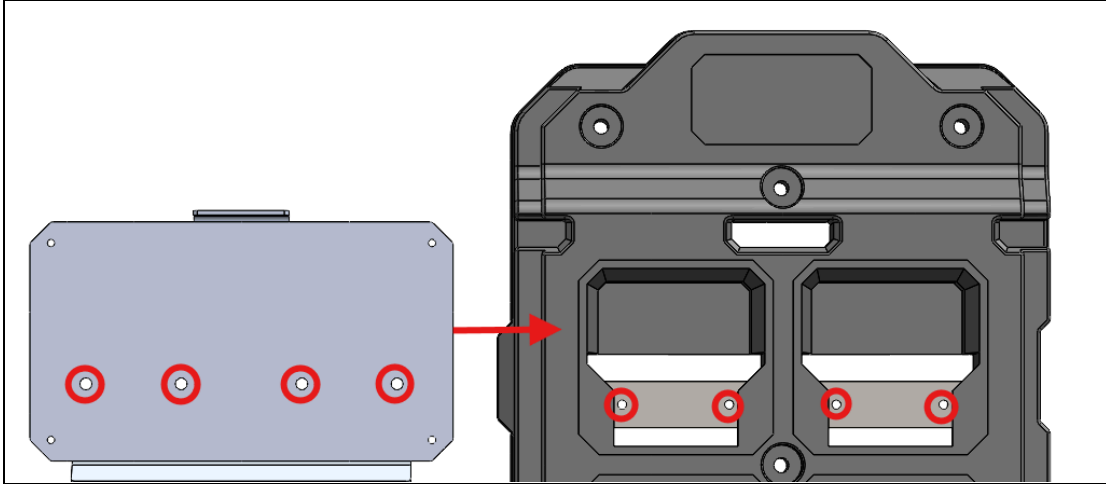

Once aligned, bolt the base to the nut plates using (4) M5x10mm Button Head Bolts

Share Your Photos!

We take great pride in building our products and we hope that pride extends to you after installing your Packout Label. If you are able to share your photos online (Facebook and Instagram), please tag **@AmericanAdventureLab**. We would love to see how it turned out and give you some reciprocal attention in return!

Congrats! You're all done!

Thank you!

At American Adventure Lab, we strive to improve anywhere we can. If you experience any issues with this product or have any suggestions, please let us know.

If you have any questions or concerns, please don't hesitate to reach out to us at 385.202.4188 or via email at Support@erp.adventurelab.com.

