



Instructions

Switch-Pros SIP9100 Mounting Bracket

Thank you for purchasing your Switch-Pros SIP9100 Mounting Bracket from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

****Please read all instructions carefully****

****This product is only applicable to our MOLLE panels so it is assumed that you already have one installed in your vehicle.****

Tools Required:

- 4mm Allen Key

What's included:

Parts

- Mounting Bracket (2):



Hardware

- M6x14mm Button Head Bolt 2




- M6 Nylon Locknuts 2



Install

This install is extremely straightforward. First fasten the switch pro to the bracket using the switch pro factory bolts through the back side of the bracket.

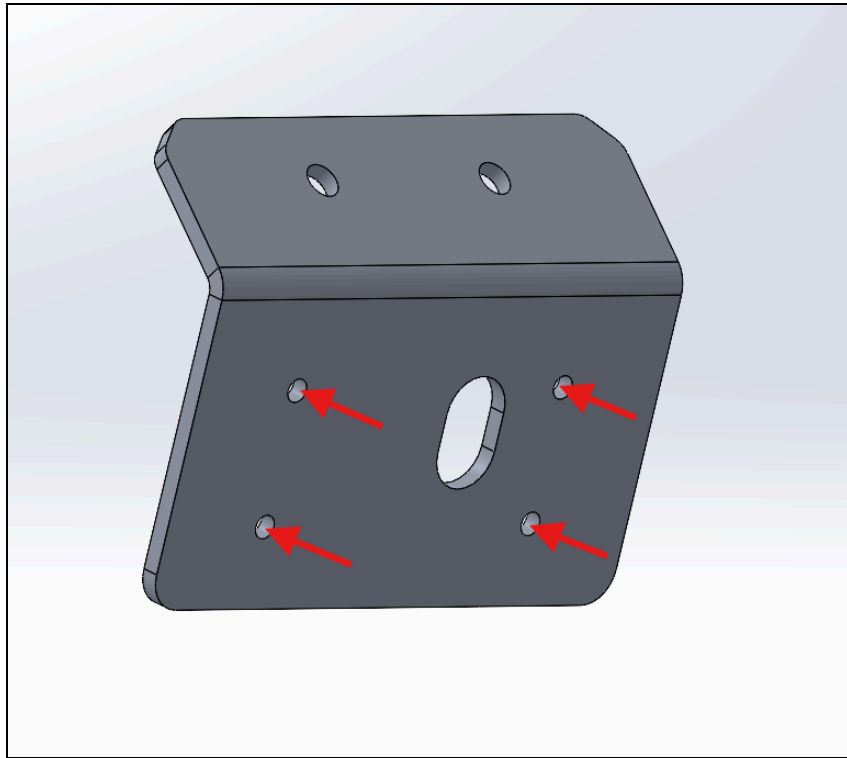

Then simply Install the bracket into your MOLLE panels using any two adjacent holes on the panel using the two supplied bolts and nuts, do so through the front face of the panel. You may need to remove your roof panel to tighten the nuts.



Share Your Photos!

We take great pride in building our products and we hope that pride extends to you after installing your Switch-Pros SIP9100 Mounting Bracket. If you are able to share your photos online (Facebook and Instagram), please tag **@AmericanAdventureLab**. We would love to see how it turned out and give you some reciprocal attention in return!

Congrats! You're all done!

Thank you!

At American Adventure Lab, we strive to improve anywhere we can. If you experience any issues with this product or have any suggestions, please let us know.

If you have any questions or concerns, please don't hesitate to reach out to us at 385.202.4188 or via email at Support@erp.adventurelab.com.

