



Instructions

FORD BRONCO - TAILGATE HUMP COVER

Thank you for purchasing your Tailgate Hump Cover from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

****Please read these instructions thoroughly before starting this project.****

****This document covers the installation of the flat cover as well as the bottle opener and hook version****

Tools/Components Required:

There is more than one tool for every job, but below is the list of tools we use for this installation.

Tools listed are for assembly only, as disassembly tools will vary

- 4mm Socket Wrench
- 2.5mm Socket Wrench

What's Included

Single ARB Compressor Tailgate Mount Parts:


Trash Hook Cover	1
Bottle Opener	1
Flat Cover	1
Large Nut Plate	1
Small Nut Plate	1

Single ARB Compressor Tailgate Mount Hardware:


M6x14mm Button Head Bolt	6
M4x12mm Button Head Bolt	4 (for hook ver)
M4 Nylon Lock Nut	4 (for hook ver)

Tailgate Hump Cover Parts:

Trash Hook Cover (1):

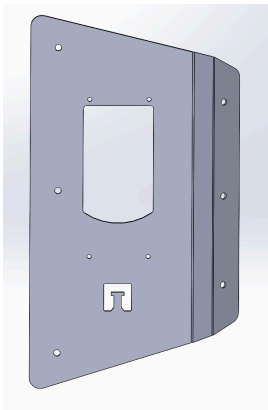

Flat Cover (1):

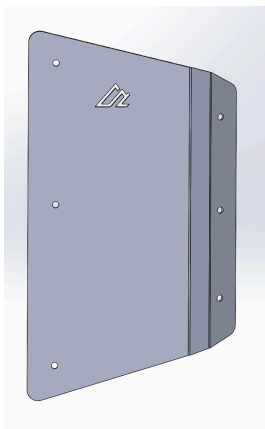


Large Nut Plate (1):



Small Nut Plate (1):



Bottle Opener (1):

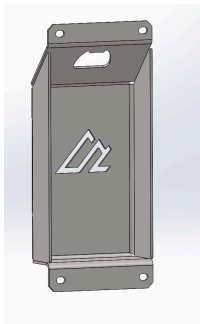

Single ARB Compressor Tailgate Mount Hardware:

M6x14mm Button Head Bolt

6



M4x12mm Button Head Flange Bolt

4



M4 Nylon Lock Nut

4




Prep

Starting with the interior, you'll need to remove the following interior panels,


- Rear gate cavity cover

Hook and Bottle Opener Version


The first step for this version is to fasten the bottle opening component to the hump cover. Do this using (4) M4x12mm Button Head Bolts and (4) M4 Lock nuts.

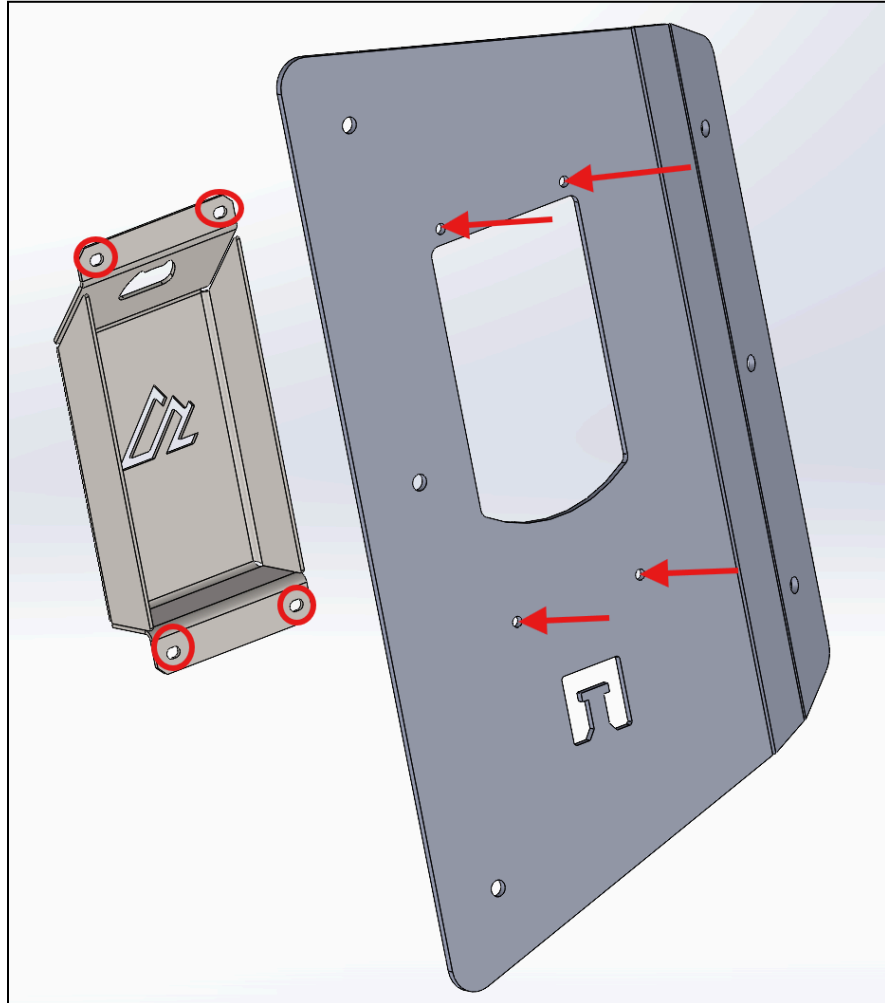

Now we can attach the cover to the tailgate. The first step in fastening the fixture is to align the Long and short nut plates in the respective slots on the back side of the bracket. These nut plates however actually sit behind the frame of the vehicle. We will show pictures in the next step to make this clear but what's important now is understanding which holes need to be bolted.

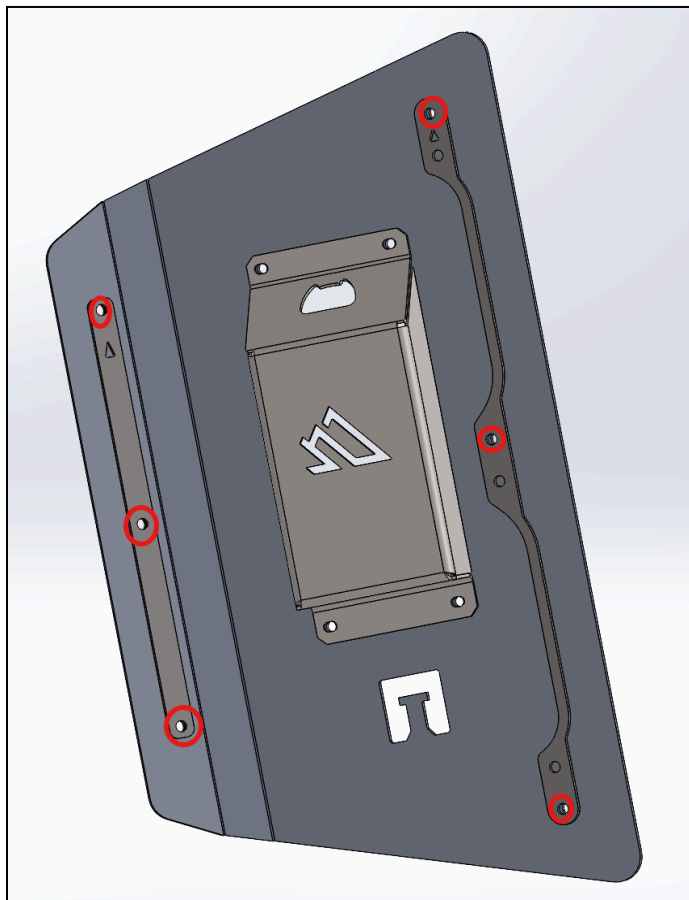


Once they are aligned, slide (3) M6x20mm Button head flange bolts through the face of the bracket On each side (6 total), through the nut plates, and into their respective slots in the tailgate of the vehicle

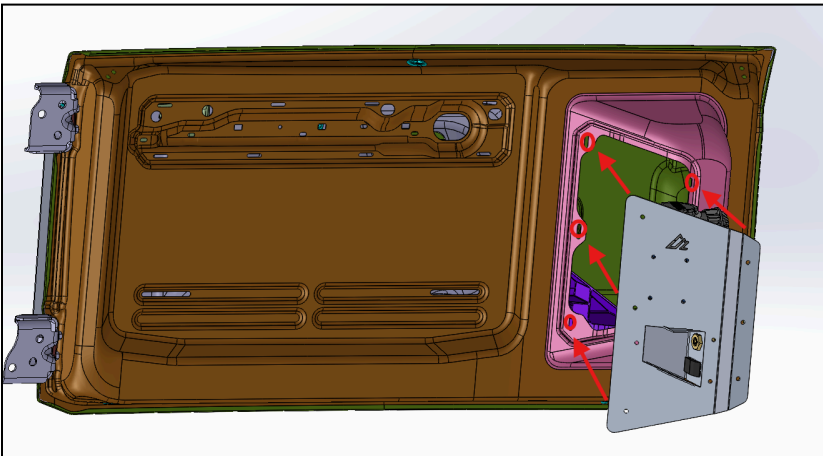


Flat Version

The only step in assembling the flat version is to fasten the plate to the cavity. To do so, first align the Long and short nut plates in the respective slots on the back side of the bracket. These nut plates actually sit behind the frame of the vehicle. We will show pictures in the next step to make this clear but what's important now is understanding which holes need to be bolted.

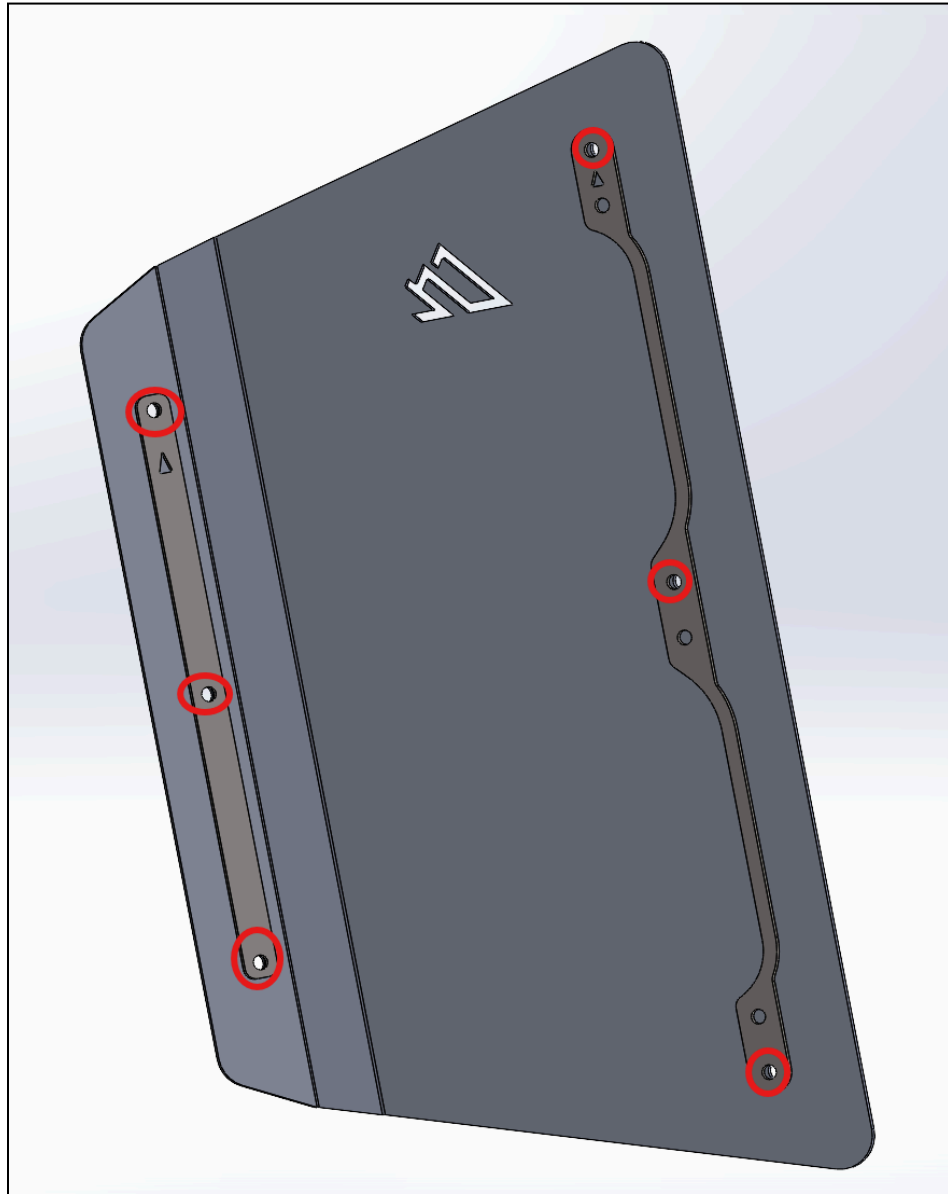

Once they are aligned, slide (3) M6x20mm Button head flange bolts through the face of the bracket On each side (6 total), through the nut plates, and into their respective slots in the tailgate of the vehicle

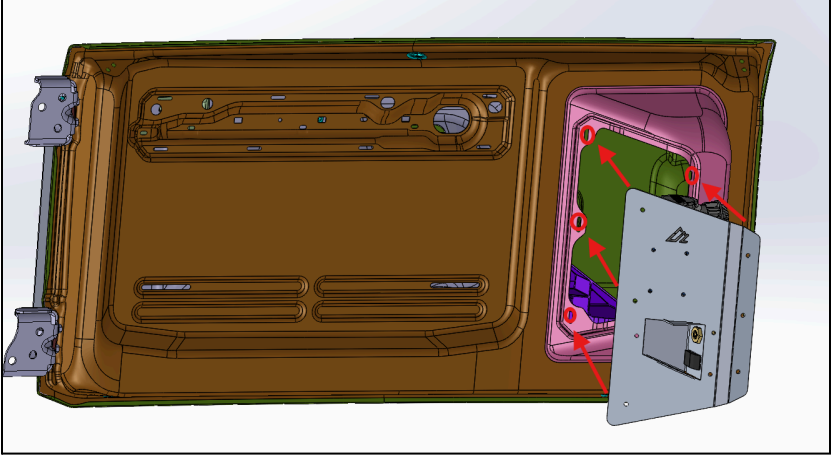

Share Your Photos!

We take great pride in building our products and we hope that pride extends to you after installing your Tailgate Hump Cover. If you are able to share your photos online (Facebook and Instagram), please tag **@AmericanAdventureLab**. We would love to see how it turned out and give you some reciprocal attention in return!

Congrats! You're all done!

Thank you!

At American Adventure Lab, we strive to improve anywhere we can. If you experience any issues with this product or have any suggestions, please let us know.

If you have any questions or concerns, please don't hesitate to reach out to us at 385.202.4188 or via email at Support@erp.adventurelab.com.

