



Instructions

TOYOTA LAND CRUISER FJ60/FJ62 CARGO SIDE PANELS – ACCESS DOORS

Thank you for purchasing your Toyota Land Cruiser FJ60/FJ62 Cargo Side Panels – Access Doors from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

****Please read these instructions thoroughly before starting this project.****

Tools Required:

M4 Allen Wrench or Socket Razor Knife	#2 Phillips Screwdriver 10mm Wrench
--	--

What's Included:

(2) Main Panels (1) Bezel Set (see diagram below) (4) Access Doors (2) Compression Latches	(34) Button Head Flange M6x14 Bolts (14) M6 Nylon Lock Nuts (14) M6 Washers Foam Tape
---	--


Step 1 - Install Foam Tape

The foam tape is what prevents rattles and ensures a tight fit with the access doors. The foam tape lives between bezels and the back of the main panels. The foam tape attaches to the bezels, not the back of the main panels. The foam tape should cover the entire bezel. After attaching the foam tape to the bezels, they can then be attached to the back of the main panels.


NOTE: Pay attention to the Bezel Layout diagrams below. The bezels with the half-moon cutouts in them need to have the foam tape installed on the correct side, based on the Bezel Layout diagrams below.

STEP 1 — INSTALL FOAM TAPE ON BEZELS


1 IDENTIFY THE BEZELS

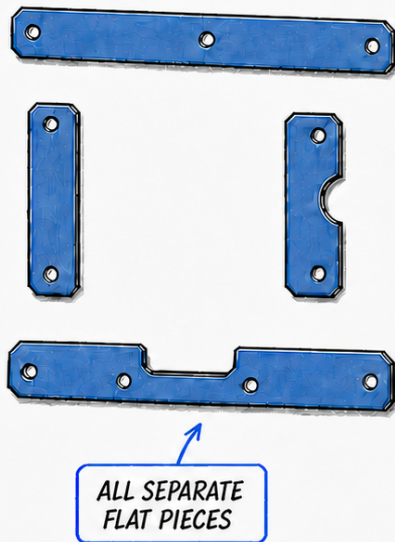

2 APPLY FOAM TAPE

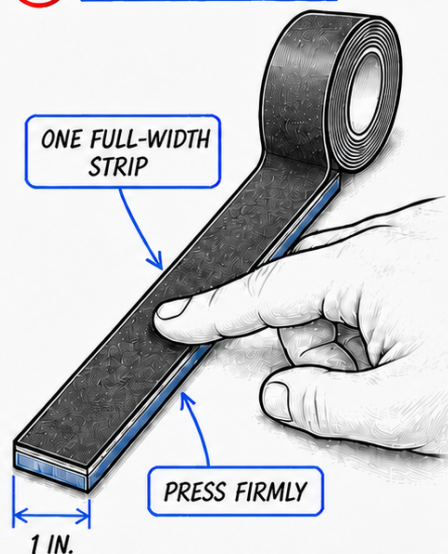

3 TRIM AND OPEN HOLES

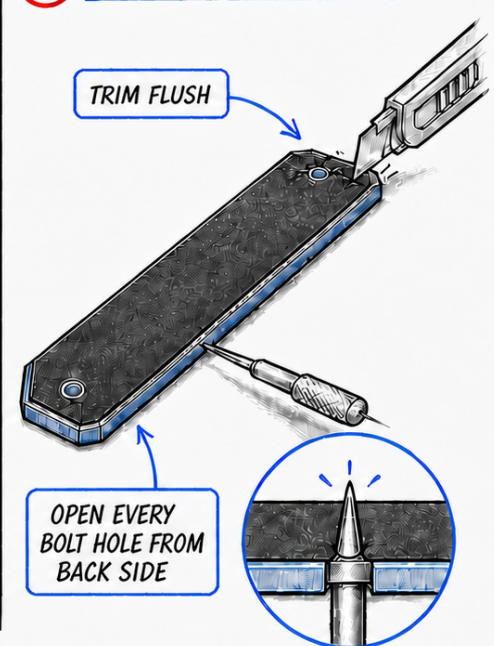


REPEAT FOR EVERY BEZEL • FULL COVERAGE PREVENTS DOOR RATTLES




Bezel Layout

Passenger Side (looking at the back side of the panel). Pay attention to the placement and orientation of the bezels that have notches cut in them.

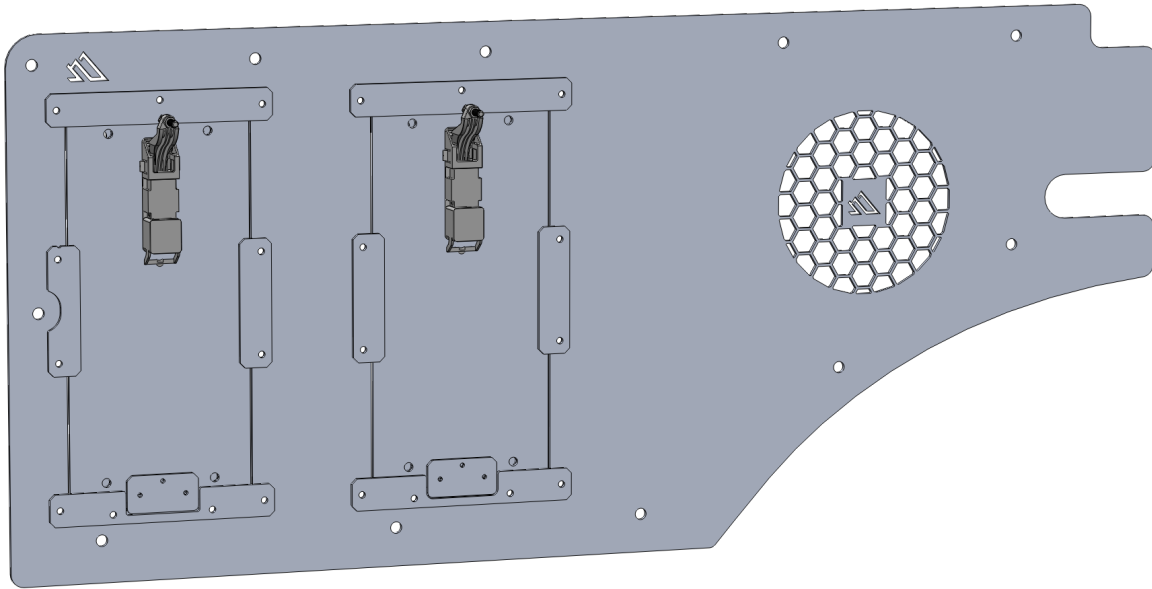

Driver's Side

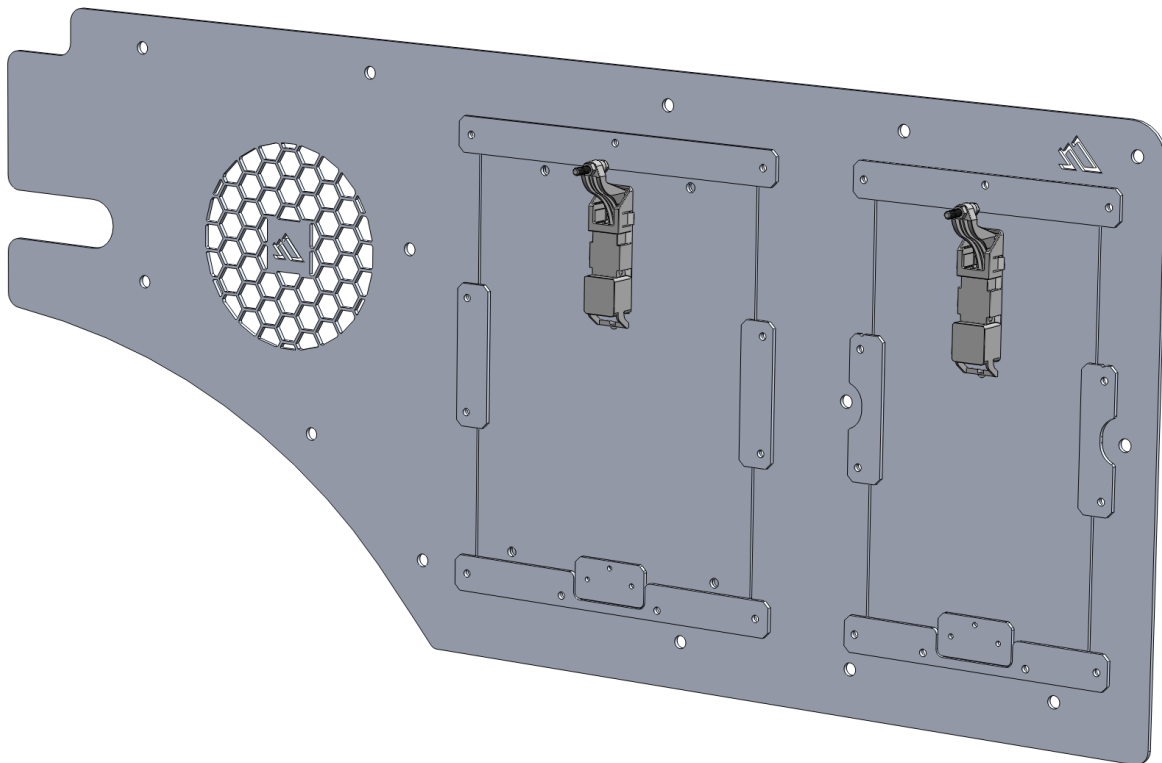


Step 2 - Install Compression Latches


Pay attention to the orientation of the doors when you install the latches. The door catch (The tab at the bottom of the doors.) lives on the back side. The latch should be inserted from the back side as shown below with the compression arm oriented toward the top of the door.

STEP 2 — INSTALL DOOR LATCHES


1 IDENTIFY FRONT AND BACK

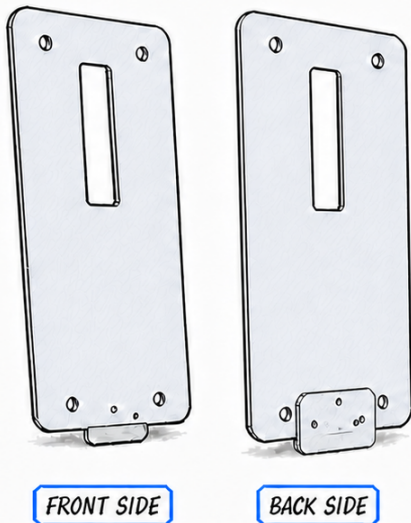

2 POSITION THE LATCH

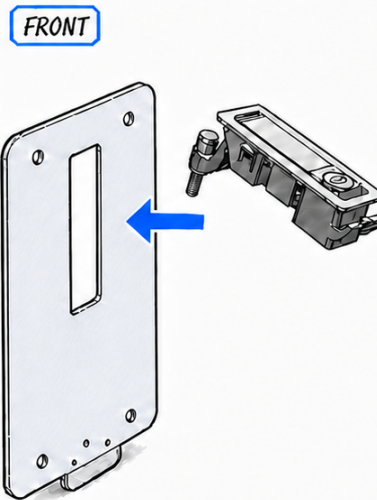

3 INSTALL REAR CLAMP

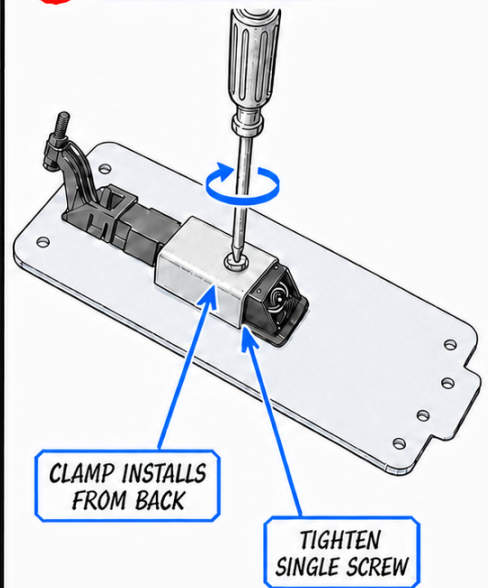

REPEAT FOR EACH DOOR • VERIFY THE LATCH OPENS AND CLOSES FREELY




Step 3 - Install Optional MOLLE Panels


If you ordered the optional MOLLE Panels, now is the time to attach those to the access doors. The only catch here is that the bolts need to be installed from the back of the panel with the nylon lock nuts living between the MOLLE panels and the access doors (not on the back side). This way, you can access the nuts with the 10mm wrench.

STEP 3 — INSTALL OPTIONAL MOLLE PANELS


1 IDENTIFY THE FRONT SIDE

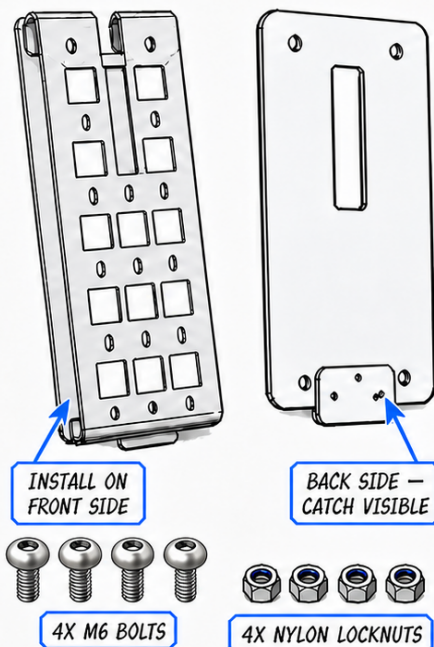

2 ALIGN FOUR MOUNTING HOLES

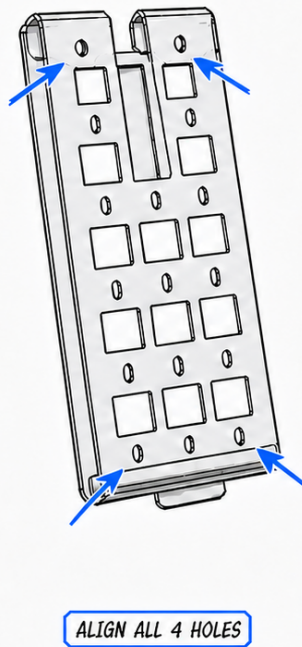

3 INSTALL BOLTS AND LOCKNUTS

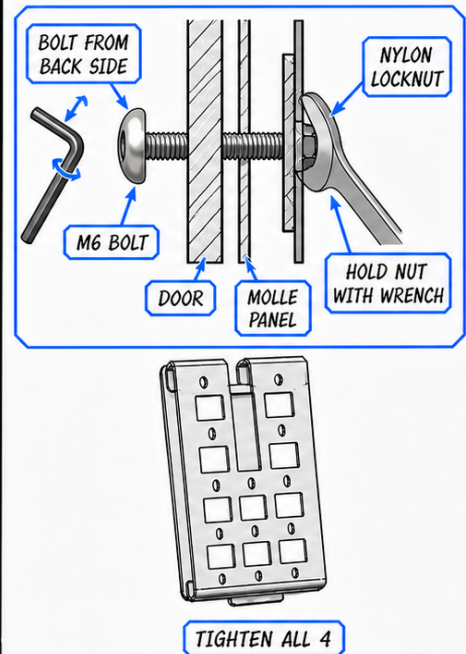

OPTIONAL ACCESSORY • REPEAT FOR EACH EQUIPPED DOOR




Step 4 - Install Panels

Now we're going to attach the main panels to the vehicle. Do this with the doors removed so you can access the nuts from the back side of the panels. Insert the bolts from the outside and place the washers and nuts on the inside.

Note: For the passenger's side panels, the frontmost bolts are difficult to reach. For that reason, we provide rubber expanding nuts. Those install into factory holes in the vehicle. Hold the panel up into place to locate those mounting holes. Then, when the bolts are inserted from the outside and tightened, the rubber expands to secure the panels.

You can now go around and tighten all hardware and reinstall access doors!

STEP 4 — INSTALL PANELS IN VEHICLE

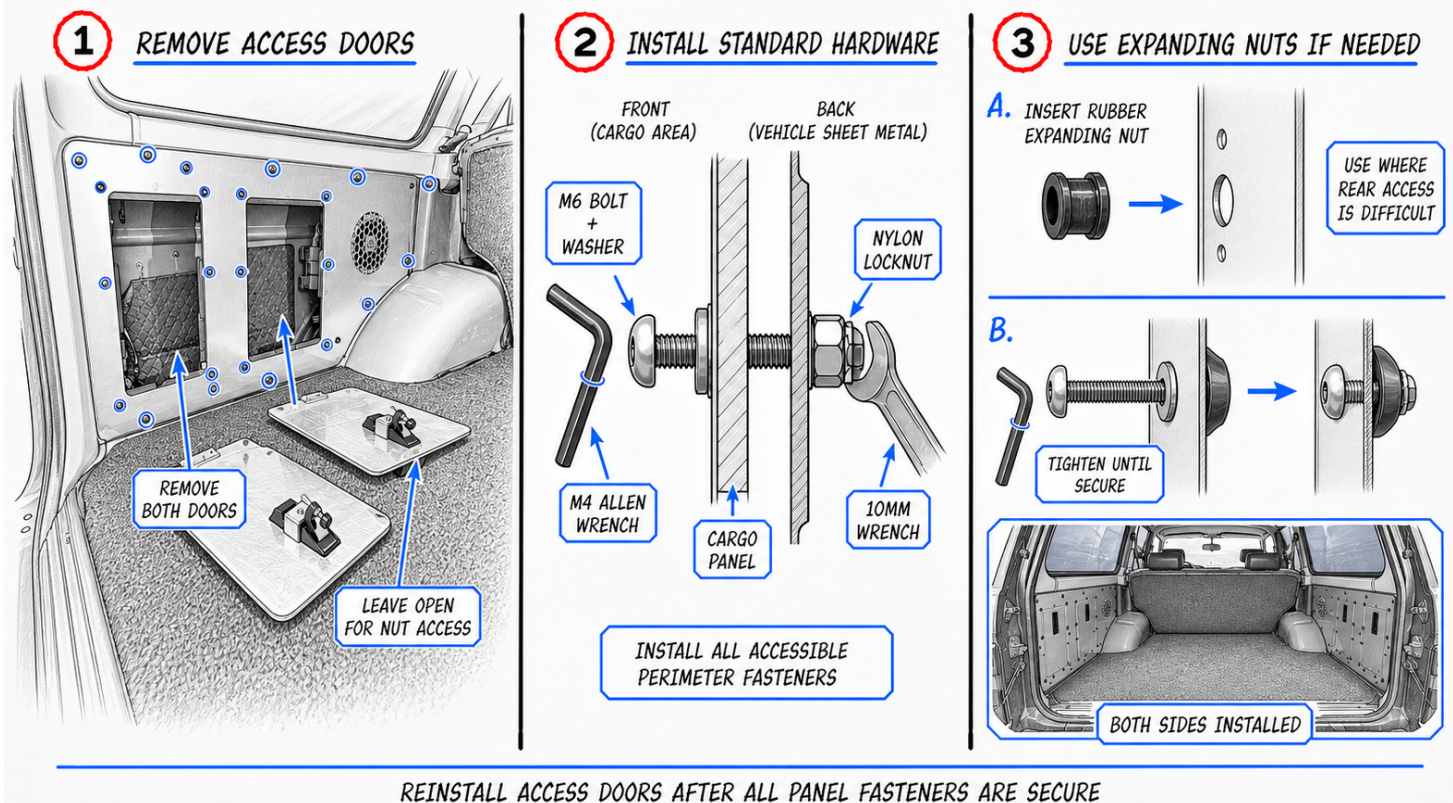

Step [5]: Share Your Photos

We take great pride in building our products and we hope that pride extends to you after installing your [Insert Name of Product]. If you are able to share your photos online (Facebook and Instagram), please tag **@AmericanAdventureLab**. We would love to see how it turned out and give you some reciprocal attention in return!

Congrats! You're all done!



Thank you!

At American Adventure Lab, we strive to improve anywhere we can. If you experience any issues with this product or have any suggestions, please let us know. If you have any questions or concerns, please don't hesitate to reach out to us at 385.202.4188 or via email at

Support@erp.adventurelab.com.

