



Instructions

JEEP JKU CARGO COMPRESSOR BRACKET

Thank you for purchasing your Jeep JKU Cargo Compressor Bracket from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

****Please read all instructions carefully****

**** Compressor and accessories sold separately ****


Tools Required:

- 4mm Allen Hex Key
- Rivnut Installer


What's included:

Parts

- Compressor racket

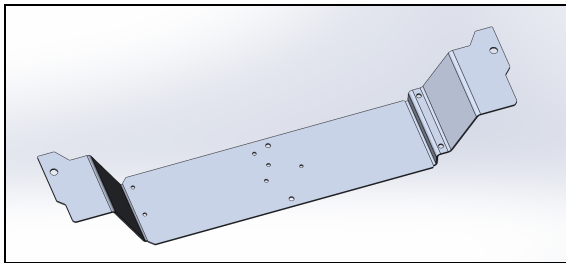

- Battery Bracket

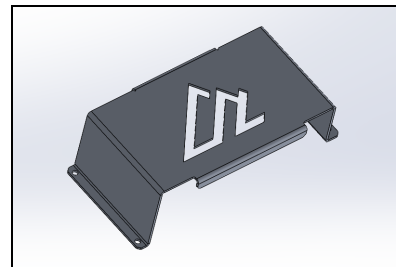

Hardware

- M6x50mm Button Head Bolt 1



- 3/4" Spacer 1




- M6 Rivnut 1




Step 1 - Clear the Trunk Cavity


First we need to clear the trunk space to make way for the bracket. If you currently have a MASS Platform installed, remove both of the main platform pieces so that the truckbed is clearly exposed.

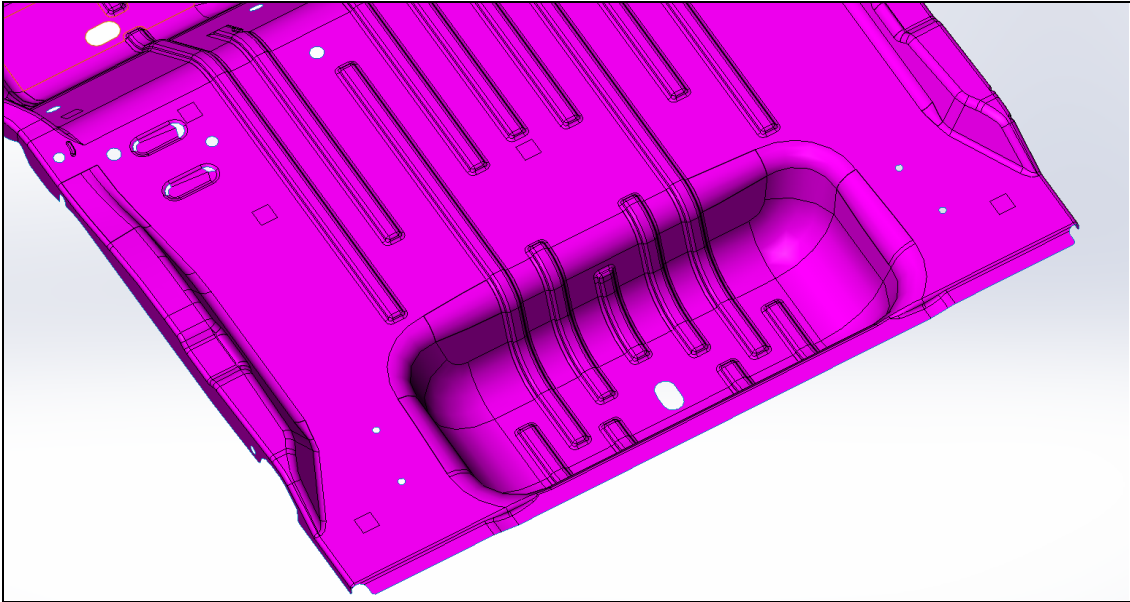

We also need to prepare the bolting location in the center of the bracket. To do so, temporarily install the bracket into the cavity using the factory bolts on the sides. Once installed locate the circled hole. Then using a 23/64" drill bit, drill directly through the hole into the truck bed, just enough to make a pilot hole/ mark.

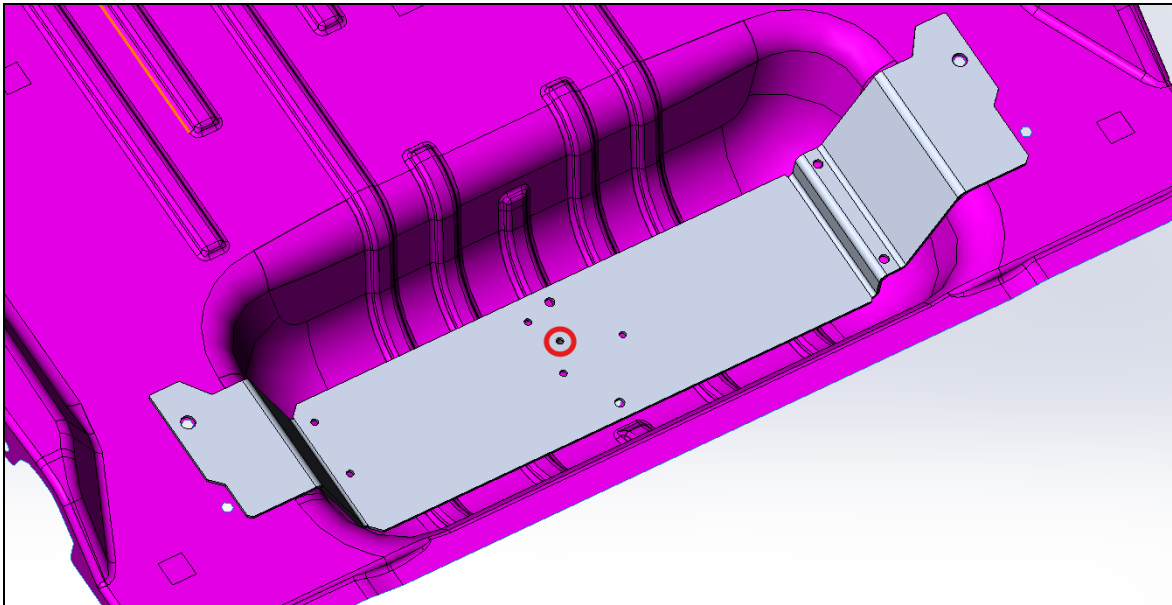


Then remove the bracket and drill through completely using the same bit size. Then insert the provided M6 rivnut and install using our rivnut installation kit or any other rivnut installing machinery. Once installed, place the spacer directly on top of the rivnut. Leave this here until the bracket is installed.

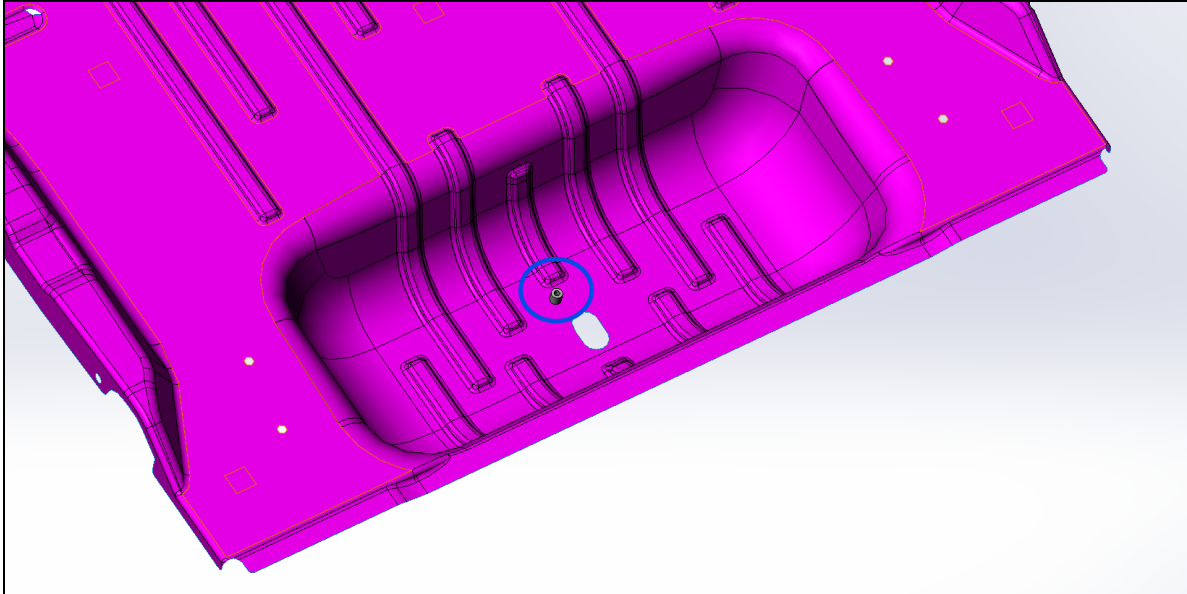


Step 2 - Fasten Applicable Attachments to the Bracket

The two main components we design for this bracket to hold are batteries and compressors. To fasten the battery, you will need to have purchased our bracket battery mount. Using the accompanying hardware of the battery mount, fasten your battery to the bracket using (4) M6 rivets and (4) M6x14mm button head bolts.

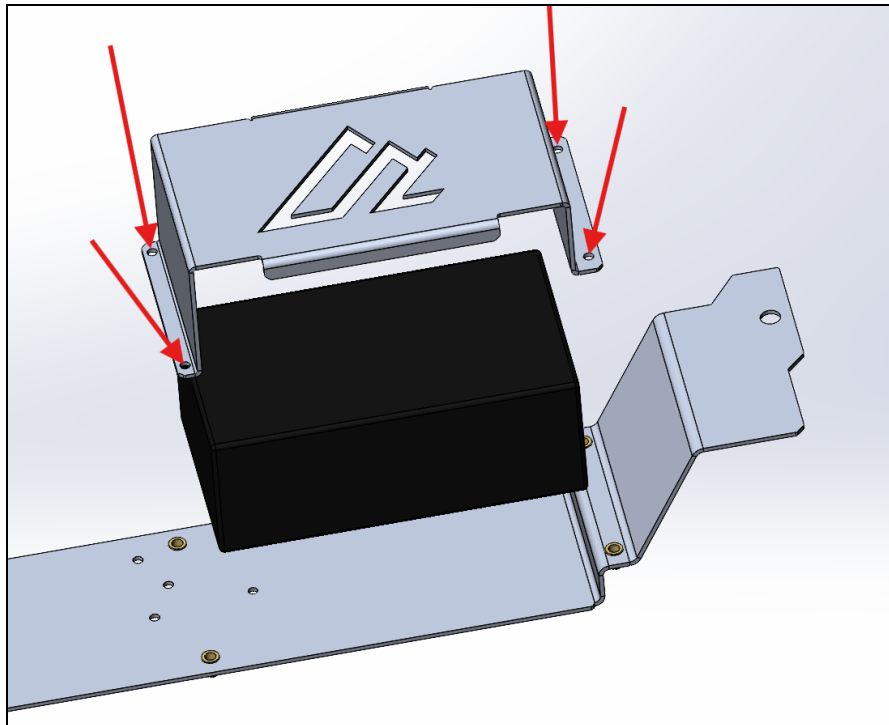


To fasten the compressor to the bracket, use the (4) factory bolts that come with your ARB Compressor.

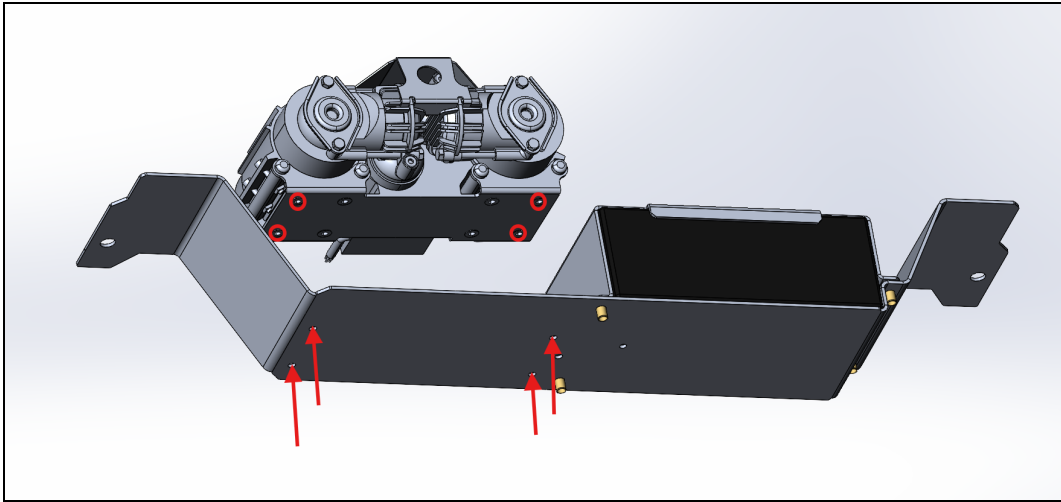

Step 3 - Fasten Bracket to the vehicle

Now carefully align the bracket with the three bolting locations. Bolt in the factory bolts on the sides first and then use the supplied M6x50mm Button head Bolt to bolt the center of the bracket to the cavity, through the rivnut.

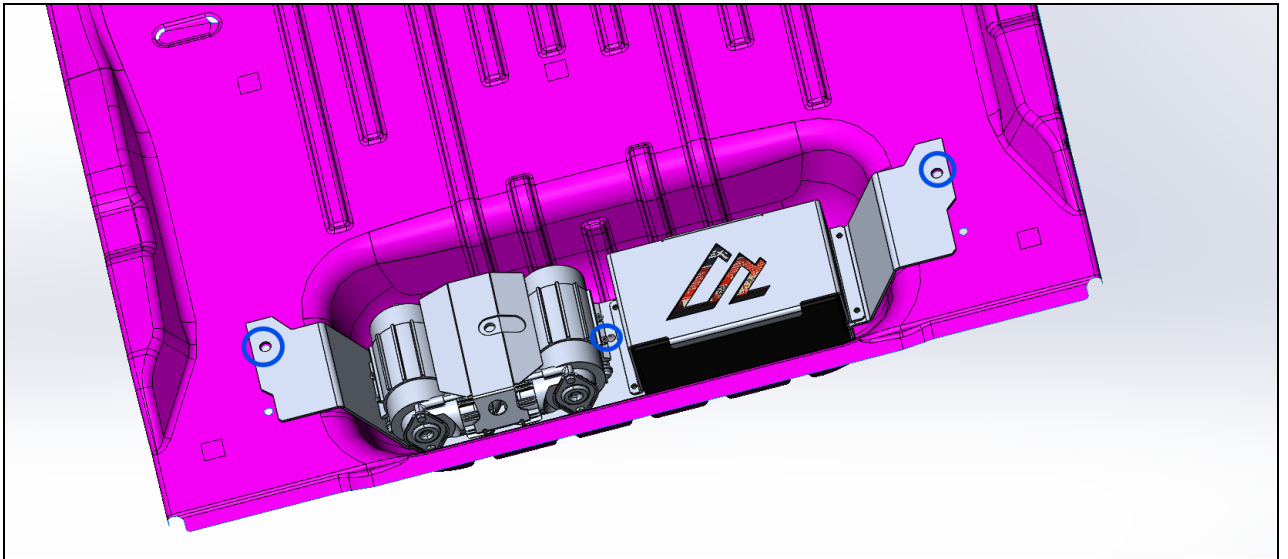

Share Your Photos!

We take great pride in building our products and we hope that pride extends to you after installing your Jeep JKU Cargo Compressor Bracket. If you are able to share your photos online (Facebook and Instagram), please tag **@AmericanAdventureLab**. We would love to see how it turned out and give you some reciprocal attention in return!

Congrats! You're all done!

Thank you!

At American Adventure Lab, we strive to improve anywhere we can. If you experience any issues with this product or have any suggestions, please let us know.

If you have any questions or concerns, please don't hesitate to reach out to us at 385.202.4188 or via email at Support@erp.adventurelab.com.

