



# Instructions

## A-PILLAR LIGHT/ANTENNA BRACKET JL/JT/392/Mojave

---

Thank you for purchasing your A-Pillar light/antenna brackets from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

**\*\*Please read these instructions thoroughly before starting this project.\*\***

### **Tools Required:**

There is more than one tool for every job, but below is the list of tools we use for this installation.


*Tools listed are for assembly only, as disassembly tools may vary.*

- T40 Torx Socket
- Ratchet or Impact
- 10mm Wrench
- M4 Allen Socket/Wrench
- M5 Allen Socket/Wrench

### **What's Included:**

- Main Light Bracket Qty 2
- Antenna Bracket Qty 2
- Spacer 20mm Qty 4
- Spacer 13mm Qty 4
- M6x90mm Hex Bolt (392/Mojave only) Qty 4
- M6x50mm Button Head Bolt (Stnrdr JL/JT) Qty 4
- M8x30mm Button head bolt Qty 4
- M6x14mm Button head bolt Qty 8
- M6 nylon locking nut Qty 8
- M6 Flat washers Qty 4

While the brackets are similar looking, there is a slight difference but install exactly the

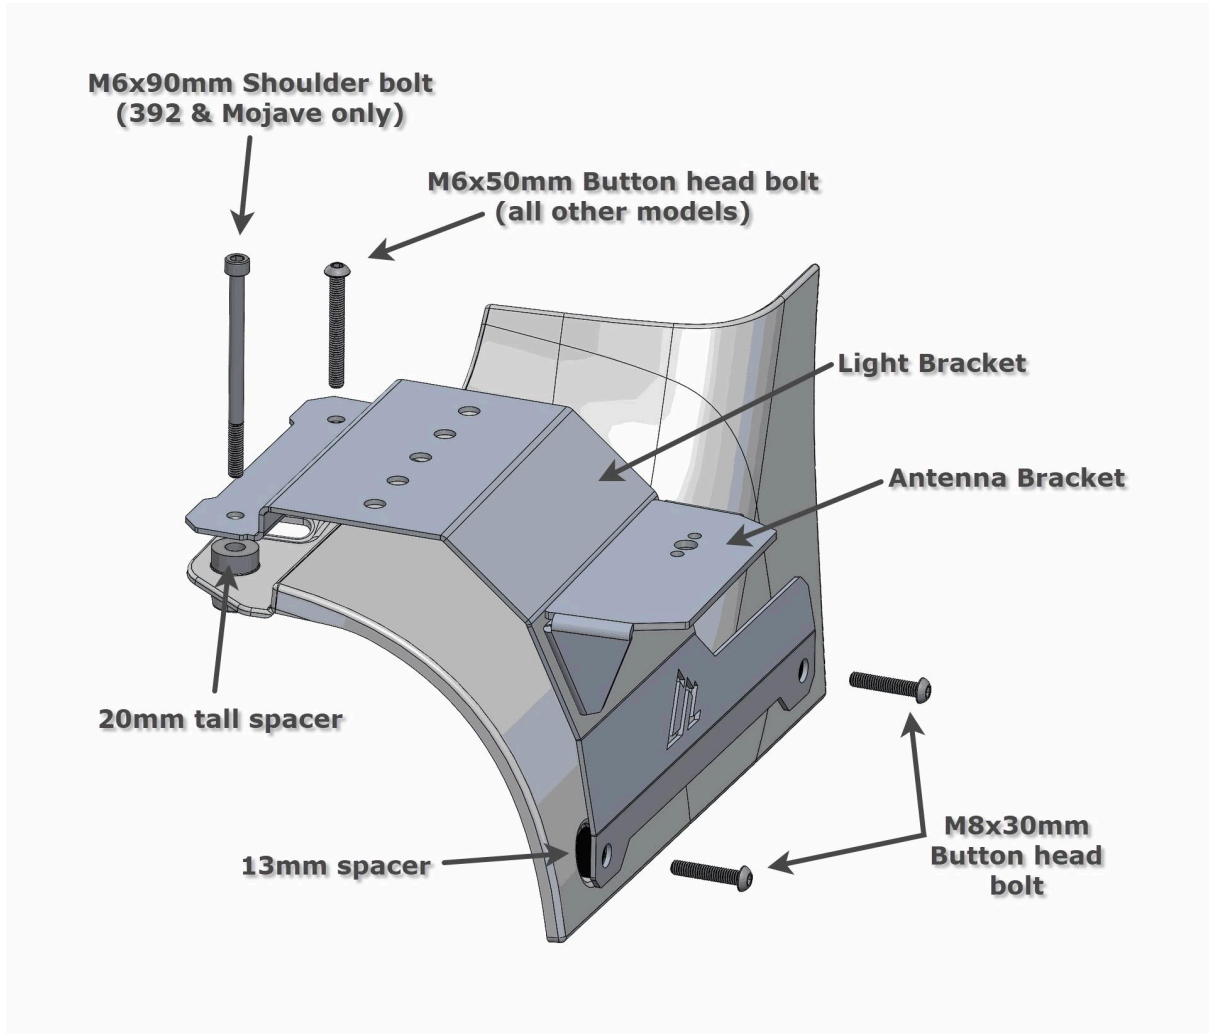

same. Check to make sure you ordered the correct brackets according to your model.

Starting with the two brackets, assemble the antenna bracket to the main bracket as shown using the four M6x14mm Button head bolts and M6 nylon locking nuts and tighten.

Next remove the four T-40 Torx bolts from the cowl corner.

Place the two 20mm spacers in the top position.

**NOTE** - If you want to install your lights to the brackets, now is a good time.

**CAUTION** - Before installing the bracket with lights to the cowl, double check the length of the light mounting bolts that they are not TOO long causing damage to the cowl and painted surface.

Take the main bracket with the antenna bracket installed and place it over the spacers as shown and insert and start the appropriate bolt. **DO NOT TIGHTEN**

- M6x90mm shoulder bolt                      392 & Mojave
- M6x50mm Button head bolt                All other models

With the main bracket loose slide the 13mm spacer between the bracket and the cowl mounting hole.

Insert and start the two M8x30mm button head bolts into the bracket.

Check all of your clearances and tighten the four bolts holding the bracket to the cowl.

Repeat for the opposite side.

## **You're all done!**