



Instructions


JK/JL/JT Bravo End Caps

Thank you for purchasing your JK/JL/JT Bravo End Caps from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

Bravo End Cap Assembly


**Passenger's Side
Shown**

1st

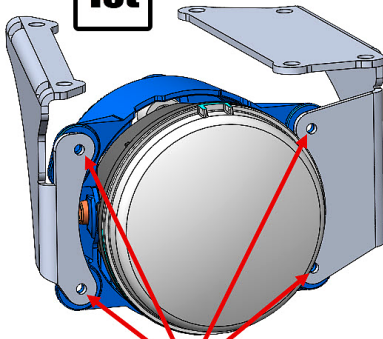


Insert (4) M4x12 Bolts where shown above. Fasten with (4) M4Nylock nuts from back side of light.

2nd

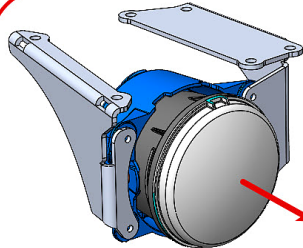


Insert FogLight Assembly into End Cap and fasten with (6)M6 bolts and Nylock nuts as shown below.

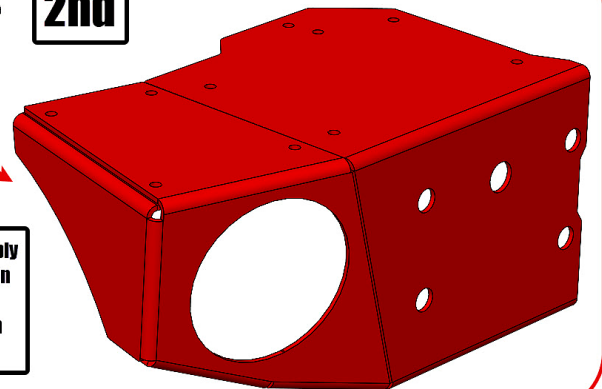

3rd

Note: Use appropriate length provided bolts in these locations.

Once assembly is complete, install onto Modular Front Bumper as instructed.

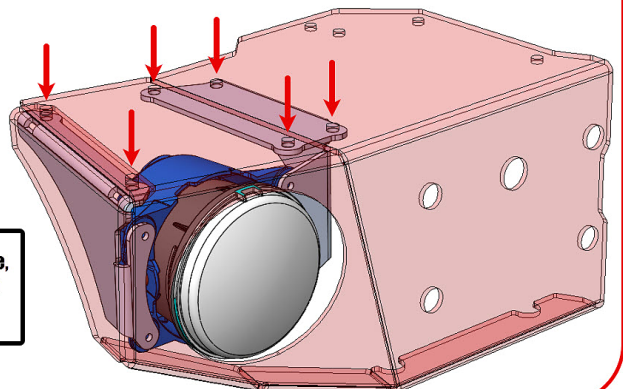

Share Your Photos

We take great pride in building our products and we hope that pride extends to you after installing your JK/JL/JT Bravo End Caps. If you are able to share your photos online (Facebook and Instagram), please tag

@AmericanAdventureLab. We would love to see how it turned out and give you some reciprocal attention in return!

Congrats! You're all done!

Thank you!

At American Adventure Lab, we strive to improve anywhere we can. If you experience any issues with this product or have any suggestions, please let us know.

If you have any questions or concerns, please don't hesitate to reach out to us at 385.202.4188 or via email at Support@erp.adventurelab.com.

