



Instructions

66 FORD RANGER AND RANGER SIDEKICK MOUNT

Thank you for purchasing your Ford Ranger and Ranger Raptor SideKick Mount from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

****Please read these instructions thoroughly before starting this project.****



NOTE: These instructions cover the assembly and installation of SideKick Mount and compatible Ball Mounts

Tools Required:

There is more than one tool for every job, but below is the list of tools we use for this installation.

Tools listed are for assembly only, as disassembly tools will vary.

- 4mm Allen Wrench
- 3mm Allen Wrench
- 4mm Socket Wrench

Hardware included:

M4x20mm Button Head Bolts	4	M5x8mm button head bolts	4
M4 Washer	4	(Per purchased ball mount)	
M4 Nylon Nut	4		


Part Overview and Prep

First lets review images of all the necessary parts and hardware to ensure we have everything we need for the installation process

SideKick Parts



Accessory Mount (1):

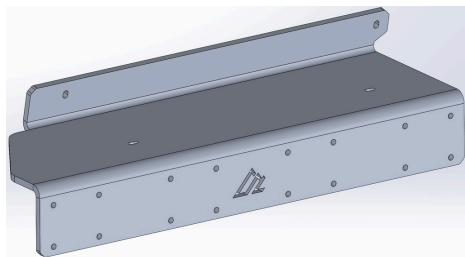

Ball Mount (1-4) (If Purchased):



Hardware

M4x20mm Button Head Bolts 4



M4 Washer 4



M4 Nylon Nut 4



M5x8mm button head bolts (Per purchased ball mount) 4



Step 1 - Prepare the Glove Compartment

Remove the rubber liner from the storage compartment just above the glove box. The SideKick mount will attach through the holes this rubber liner attaches to (circled below). This should be easily pliable with your fingers, if not you can use a flathead screwdriver to dislodge it.



Next empty the glove box and remove it. Do this by pushing in on the tabs on each side, opening it further, and pulling up. The side latches that let you do so are shown below.



At this point, the cavity on the glove compartment should look like this.




Step 2 - Install the SideKick Mount

Now that your glove compartment is prepared, align the two holes on the smaller back flange of the Mount with the two outer most holes in the cavity here



Now fasten the mount into place using (2) M4x20mm Button Head Bolts in the two corners

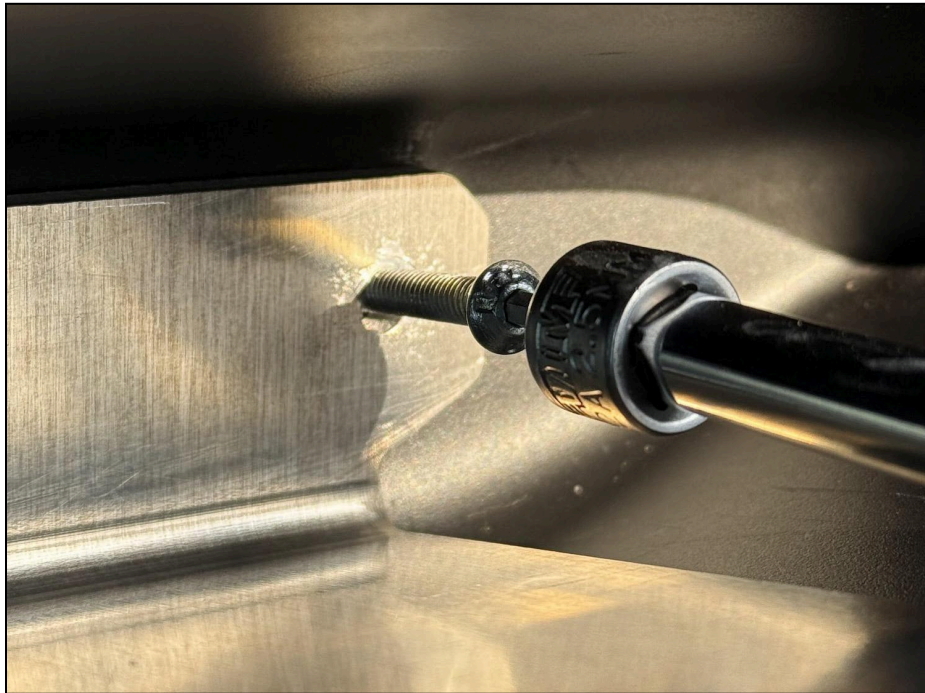


Attach (2) M4 washers and M4 locknuts to the back to secure the bolts. Do not secure too tightly as the plastic can only withstand so much force and we still have more bolts to add which may slightly alter the position of the mount



Next we'll put the remaining (2) M4x20mm Button Head Bolts through the top of the bracket into the 2 following slots of the 4 that we circled earlier.



Fasten these bolts using an M4 washer and Nylon Locknut on the underside of each bolt. It is a tight fit, but it helps to put (2) nuts in one socket so you can initially thread the nuts easier. Once again do not secure too tightly as the plastic can only withstand so much force

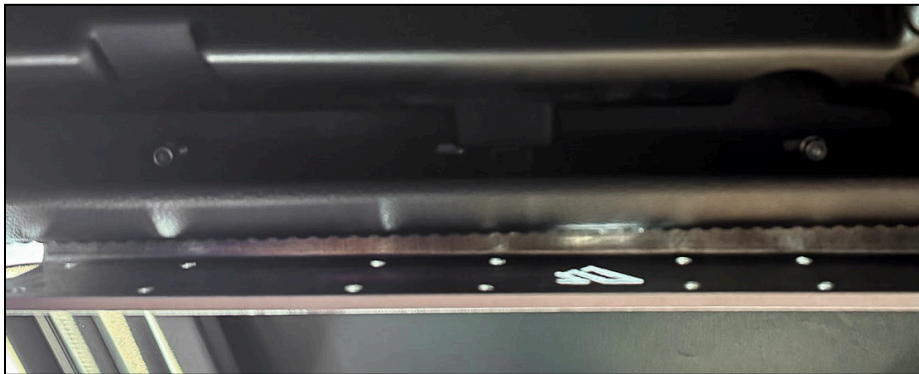

Ball Mount Bracket Installation

To install the Ball Mount, simply bolt through the front face of the bracket using (4) M5x8mm Button Head Bolts per mount. We recommend using a medium strength thread locker to ensure these bolts don't come loose. There is space for up to a total of 4 Ball Mounts.



Step 5: Share Your Photos

We take great pride in building our products and we hope that pride extends to you after installing your Ford Ranger and Ranger Raptor SideKick Mount. If you are able to share your photos online (Facebook and Instagram), please tag **@AmericanAdventureLab**. We would love to see how it turned out and give you some reciprocal attention in return!

Congrats! You're all done!

Thank you!

At American Adventure Lab, we strive to improve anywhere we can. If you experience any issues with this product or have any suggestions, please let us know.

If you have any questions or concerns, please don't hesitate to reach out to us at 385.202.4188 or via email at Support@erp.adventurelab.com.

