



# Instructions

## RR-1053 - RANGER BED RAIL UTILITY NUT PLATE INSTRUCTIONS

Thank you for purchasing your Ranger Bed Rail Utility Pocket Nut Plates from AAL! We greatly appreciate your trust in our company. We take that purchase and your commitment to us very seriously. If you have any questions along the way, please don't hesitate to give us a call at 385.202.4188.

**\*\*Please read these instructions thoroughly before starting this project.\*\***

### Tools Required:

There is more than one tool for every job, but not this one...there really is just one for this job!

- M5 Allen Wrench/Socket


### What's included:

Front Nut Plates	2	Rear Nut Plates	2
Center Nut Plates	2	M8x16mm Button Head Bolts	12

### Step 1 - Teardown and Prep

Remove utility pocket caps from the bed rails so you can see the mounting holes. See **Diagram 1** for reference.

**Diagram 1**

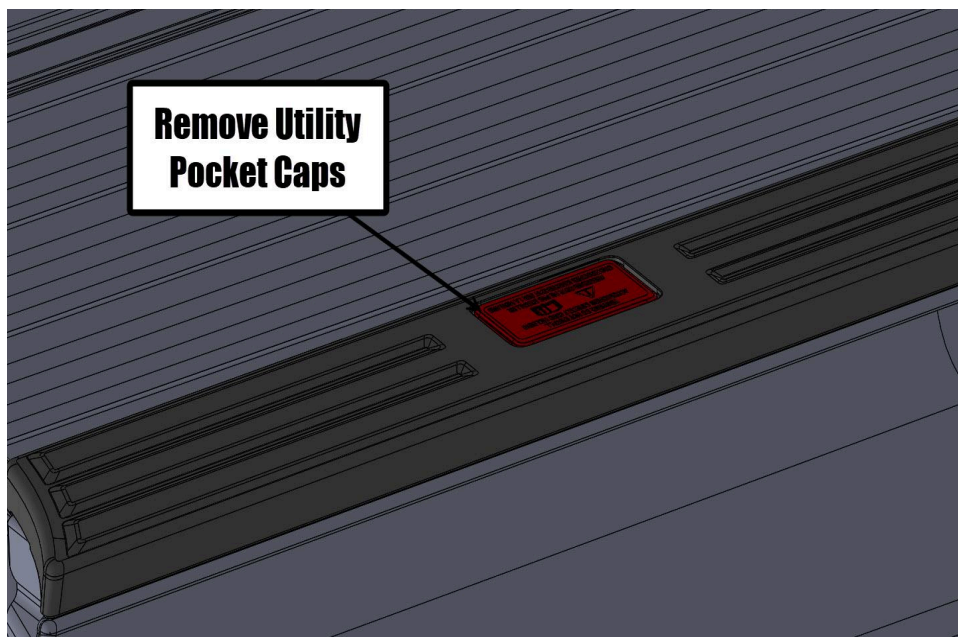


## **Step 2 - Install Nut Plates**


The nut plates are designed to install using the bonded nuts on the bottom side of the bed rail. Using **Diagrams 2-5**, install all (6) Nut Plates with the provided (12) M8x16 Button head bolts.

*It is recommended that you apply a medium strength threadlocker before installing these bolts.*


**Diagram 2**

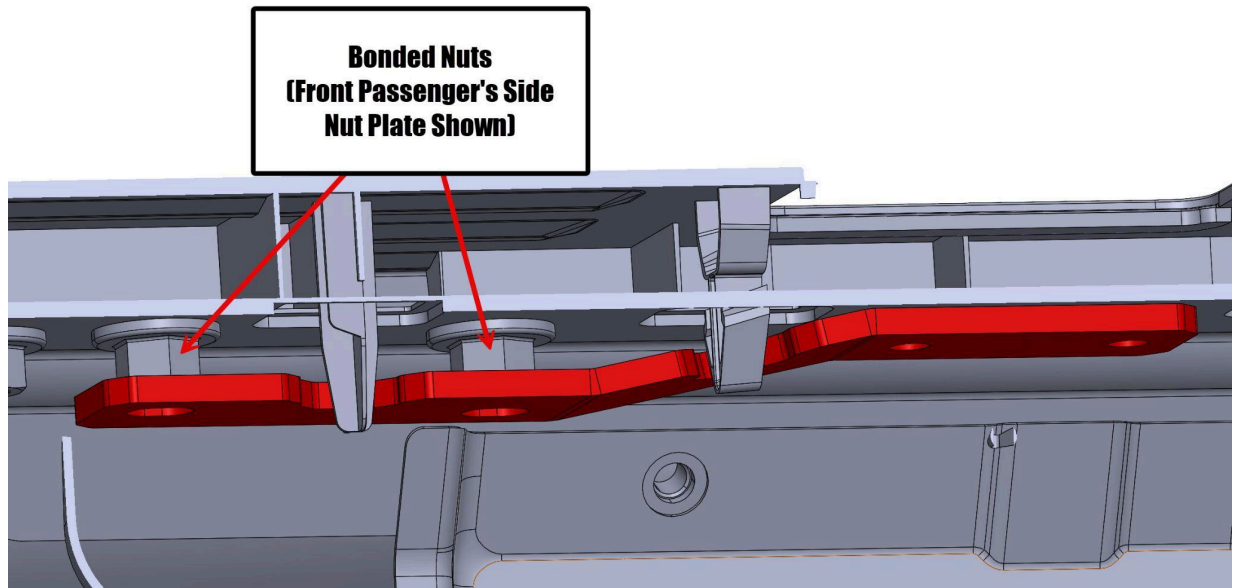


**Diagram 3**

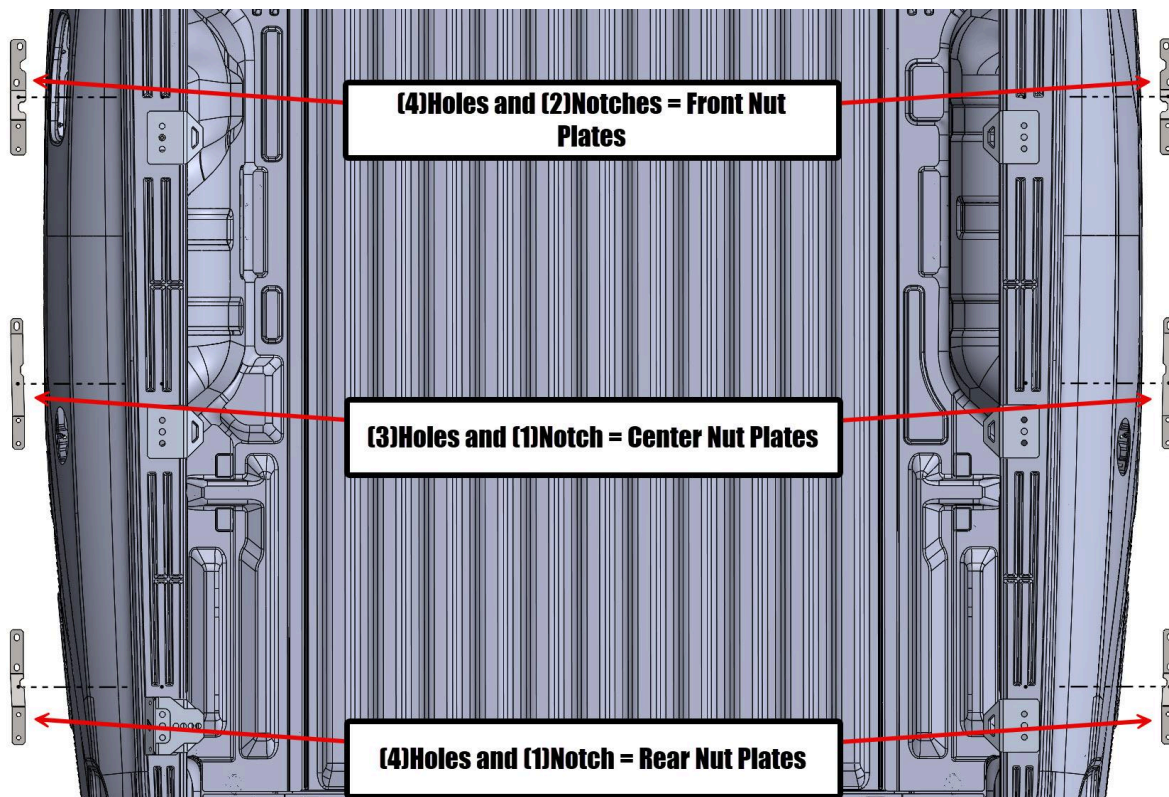

**Diagram 4**

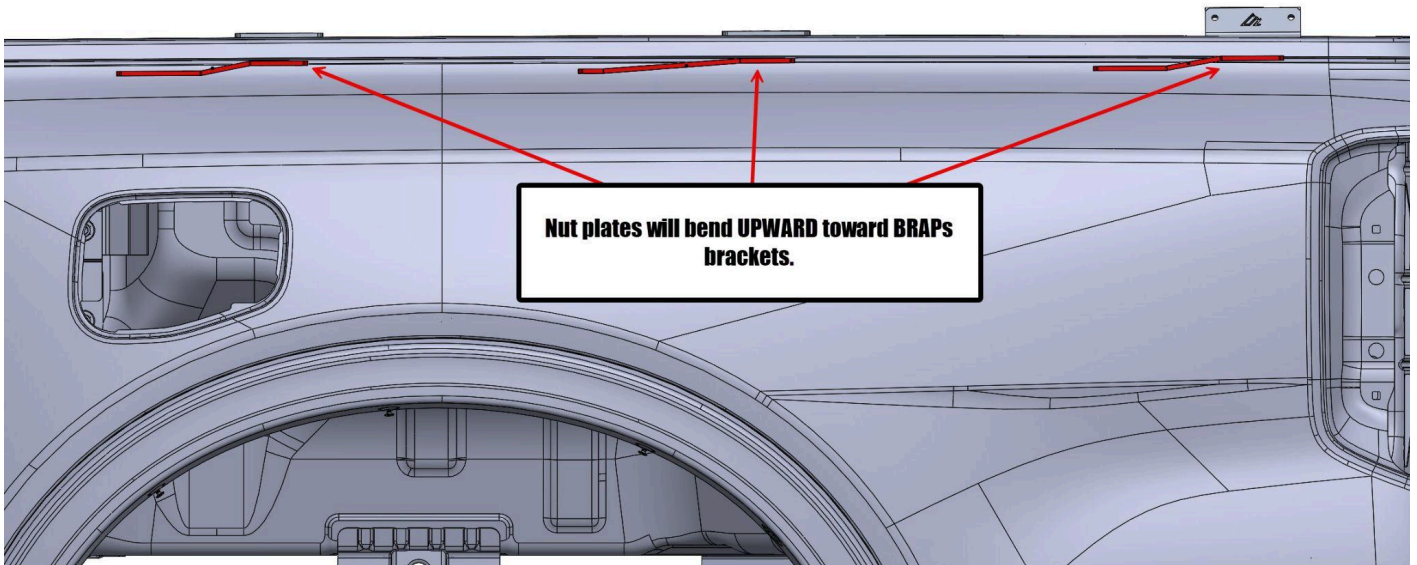

**Diagram 5**

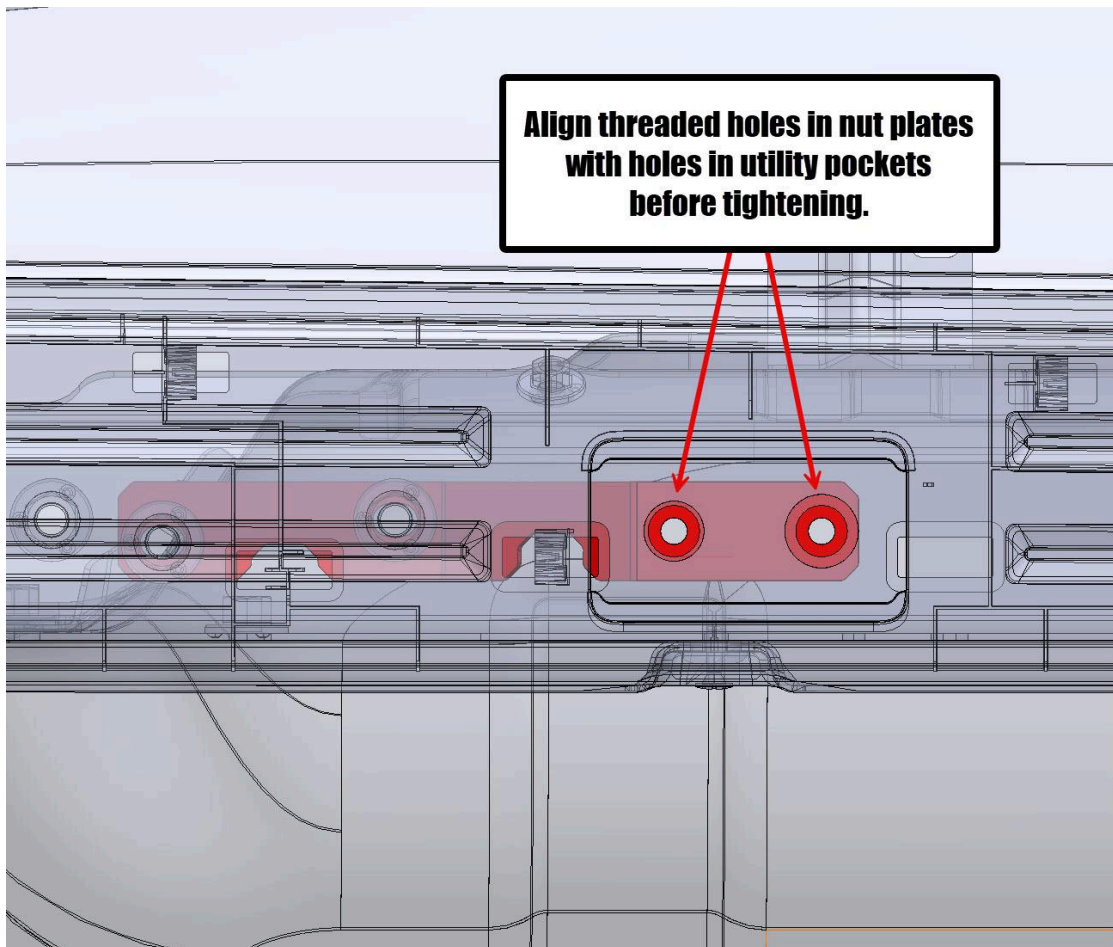

Once all bolts are started, and threaded holes are aligned with the holes in the bottom of the utility pockets, tighten all (12) M8 bolts using your M5 Allen socket/wrench.

### **Step 3: Share Your Photos**

We take great pride in building our products and we hope that pride extends to you after installing your Ranger Bed Rail Utility Pocket Nut Plates. If you are able to share your photos online (Facebook and Instagram), please tag **@AmericanAdventureLab**. We would love to see how it turned out and give you some reciprocal attention in return!

**Congrats! You're all done!**

**Thank you!**

**At American Adventure Lab, we strive to improve anywhere we can. If you experience any issues with this product or have any suggestions, please let us know.**

**If you have any questions or concerns, please don't hesitate to reach out to us at 385.202.4188 or via email at [Support@erp.adventurelab.com](mailto:Support@erp.adventurelab.com).**

